



# DUAL OVERFLY XL™ 10'x7'

 
## Instructions apply to Part Number 9232-107

### When You Are Ready To Set Up Your Tent

- Select a level campsite clear of rocks, branches and other hard or sharp objects.
- Do not set up your tent under trees.
- For best results in windy conditions, position the end of tent into the wind.

#### Main Tent Poles for 10x7 Dome Tents (Black)

Part No. 9230-320



#### Rainfly Poles for 10x7 Dome Tents (Black)

Part No. 9232-322



#### Rainfly 10x7 Dome Tents Part No. 9238-328

 
#### Center Ridge Pole Connecting Room (Gray)

Part No. 9232-324



#### Side Pole Connecting Room (Black)


Part No. 9232-326



## 1 Layout & Positioning of Tent, Pole Assembly

- Layout and position tents where desired with doors facing each other. Allow approximately 6' between them. (illus. 1)
- Unzip doors.
- Partially stake down the tents using the rings of the pin & ring system at the corners of the tent. Keep the floor taut. (illus. 2) Do not fully stake down, you may need to make adjustments later.
- Assemble main tent poles (black) by interlocking shock-corded poles. This will make two long poles for each tent.
- Insert the poles diagonally into pole sleeves. The center of the poles should cross forming an "X" in the middle of tent. (illus. 1)


Assembled black main tent poles inserted through pole sleeves

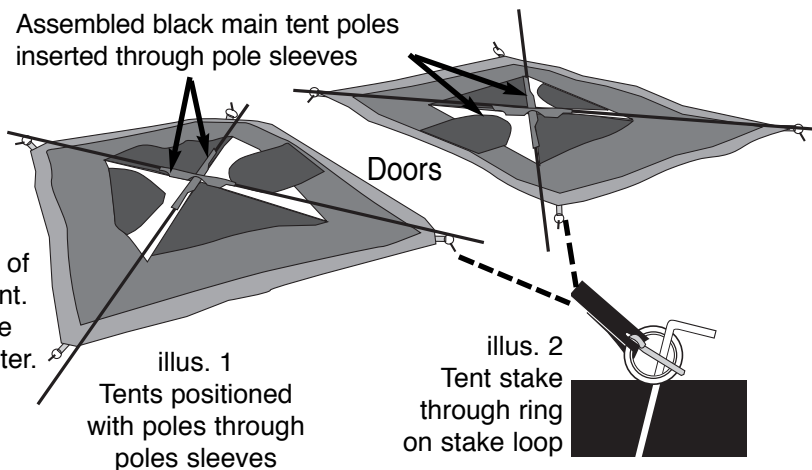

## 2 Connect Frame to Tent


- Insert one end of main tent pole onto pin of pin & ring system at tent corner. (illus. 3), (illus. 4)
- Go to opposite end of pole and gradually apply pressure to the pole forming an arch until you are able to insert the pin into the pole.
- Repeat for second pole. (illus. 3), (illus. 4)
- Repeat for second tent. (illus. 4)

illus. 3  
Assembled tents without rainflys

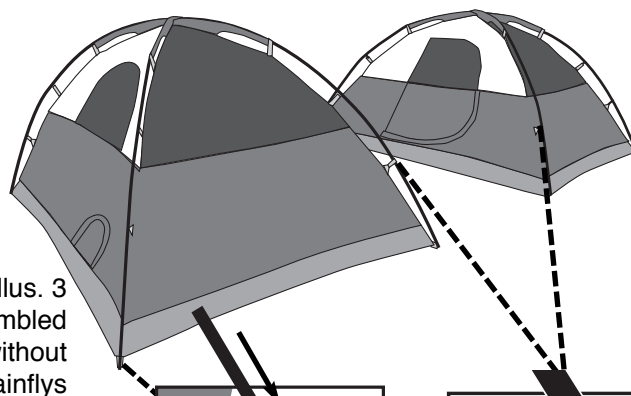


## 3 Attach Tent to Frame Using Frame Clips

- Attach frame clips along the edges of tent to frame poles. (illus. 3), (illus. 5)
- Make any adjustments to the tent corner stakes that are needed.

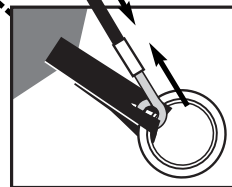


illus. 4  
Insert pin into pole end

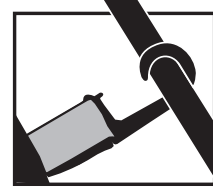

illus. 5  
Frame clips


## 4 Attach Tent Rainflys

- Assemble tent rainfly poles by interlocking shock-corded pole.
- Insert rainfly pole into the pole pocket located at the center edges of the underside of rainfly. (illus. 6), (illus. 7)
- Drape rainfly over tent frame, pole side down. Rainfly pole should be over door and rear window. NOTE: The toggles on the rainfly need to run from the front corners to the top of the tent.
- Connect the four elastic loops with hooks, (found at the rainfly corners) to the fabric loops on the bottom row of frame clips.
- Secure rainfly with attachments located on underside of fly. (illus. 7)
- Repeat for second tent.

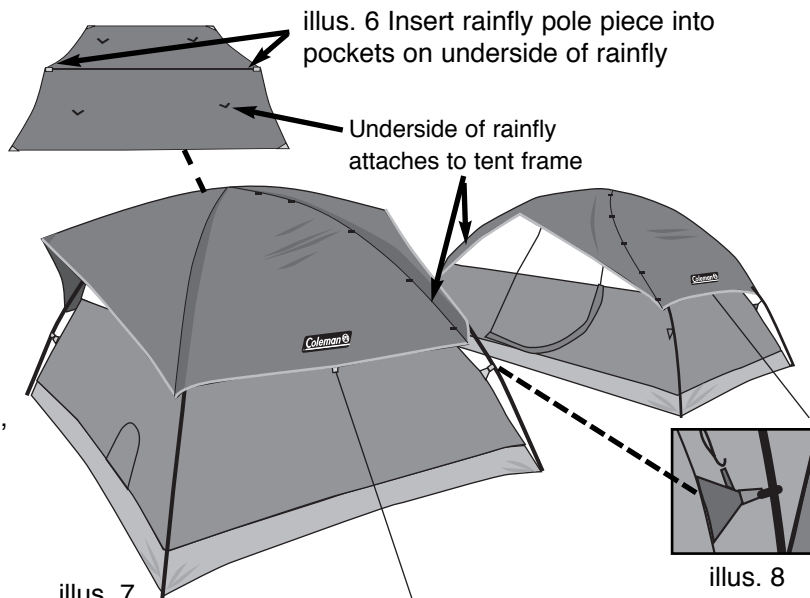

## 5 Connecting Room

- Layout connecting room and assemble center ridge and side poles.
- Insert the center ridge pole (gray) through ridge pole sleeves and insert the pole ends into the pole pockets. (illus. 9)
- Insert the side poles through the pole sleeves on connecting room. (illus. 9) Position connecting room between tents, pole side up.
- Insert one end of side pole onto pin of pin & ring system on the stability strap. (illus. 3)
- Go to opposite end of pole and gradually apply pressure to the pole forming an arch until you are able to insert the pin into the pole.
- Repeat for second pole. (illus. 9), (illus. 10)
- Move tent as needed for better fit with connecting room. Fully stake down tents.
- Attach connecting room to the tents with toggles & loops on rainfly and hooking the stake loop ring at the tent corners. (illus. 10)
- Stake out the tents with (2) side guylines each and the connecting room with (4) guylines. (illus. 8)

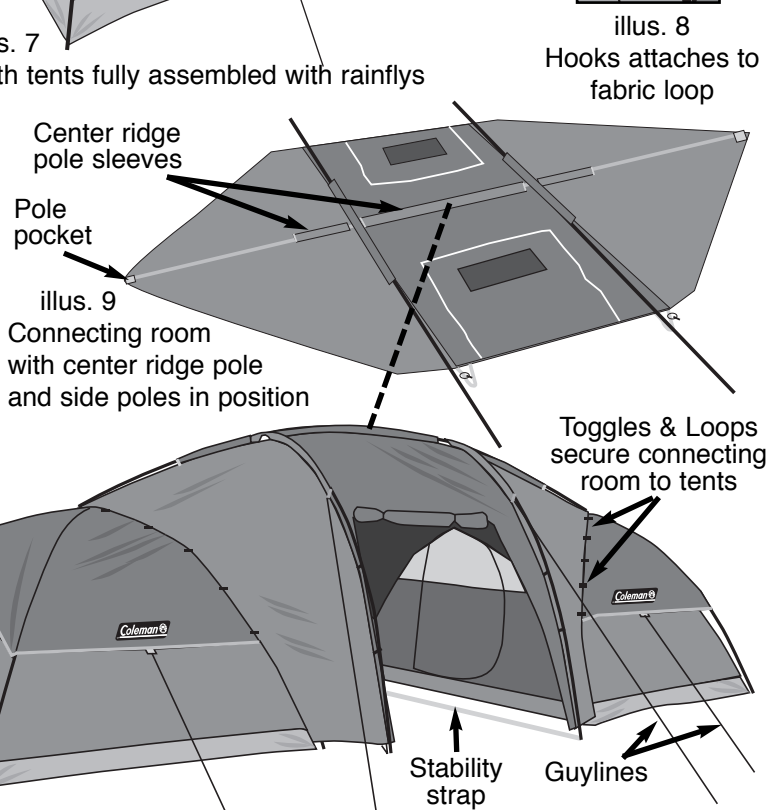

illus. 10 Both tents and connecting room completed

### Things You Should Know

- Under certain conditions (cold weather, high humidity, etc.) condensation will form on the inside surfaces of your tent. Condensation is caused by water vapor from your breath, perspiration, or any wet clothing inside your tent. It is NOT LEAKAGE through the tent fabric. It can be minimized by removing wet clothing from your tent and by providing good ventilation through the tent.
- Never store tent, even for a short period of time, without drying it thoroughly and brushing off caked dirt. Do not pack stakes or poles inside your tent. Use a separate storage bag.
- STAKES SHOULD BE REMOVED BY PULLING ON THE STAKE ITSELF. NEVER PULL ON THE TENT FABRIC OR TENT STAKE LOOP TO REMOVE STAKE.
- TENT POLES SHOULD NOT BE LEFT TELESKOPED TOGETHER DURING STORAGE.
- Seam sealer has not been provided with your tent. For additional protection we recommend seam sealing your tent prior to camping. Seam sealer may be purchased through your local retailer or at your local sporting goods store.

- Do not leave your tent set-up for weeks at a time, be aware that exposure to the ultraviolet rays of the sun can seriously damage material and/or cause it to become discolored.

**WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.** This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



THE COLEMAN CO., INC.  
3600 N. Hydraulic • Wichita, Kansas 67219  
1-800-835-3278 • www.coleman.com

MADE IN THAILAND